


INSTRUCTION MANUAL FOR MIYOTA WATCH MOVEMENT

AUTOMATIC MECHANICAL MOVEMENT

INSTRUCTION MANUAL

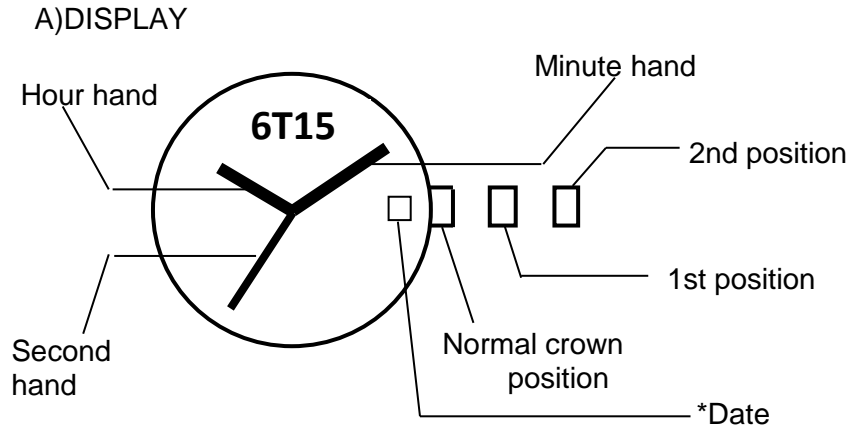

*Date position may be located at different position depends on models.

B) SETTING THE TIME

1. Pull the crown out to the 2nd position.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position, second hand begins to run.

C) SETTING THE DATE

1. Pull the crown out to the 1st position.
2. Pull the crown from the 1st position to the 2nd position, then date advances one day.
3. After the date has been set, push the crown back to the normal position.


MIYOTA

诞生于日本的世界通用机械机心
日本制造
金属机心

MIYOTA机心操作手册 型号 6T15 自动机械机心

- 1) 显示和按钮
- 2) 上发条
- 3) 校时
- 4) 调整日历

1) 显示和按钮

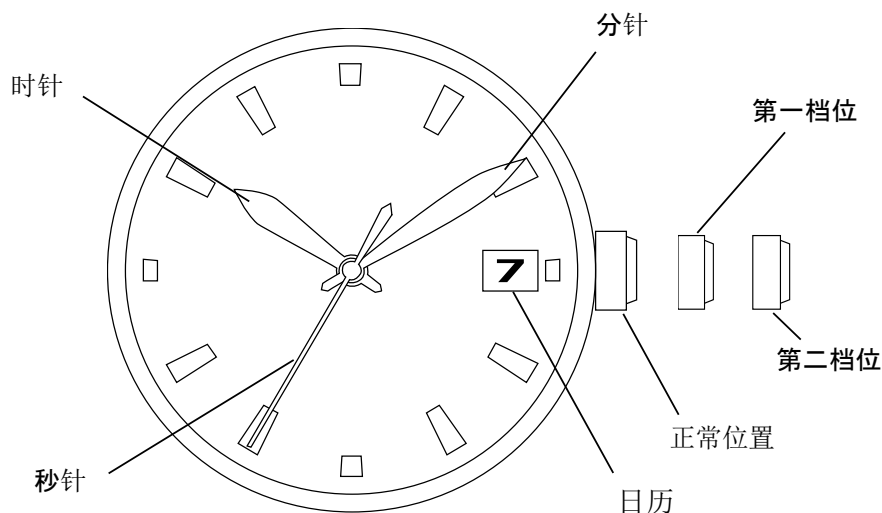

2) 上发条

自动表也可以通过手动上发条，顺时针转动位于正常位置的柄头即可手动上条的话一般顺时针转十五至二十下即可。

3) 校时

1. 将柄头拉到第一档位
2. 转动柄头调整时针和分针。
3. 调整后，把柄头推回正常位置。

4) 调整日历

1. 先把柄头拉到第一档位。
2. 再从一档拉至二档位置，日历即跳动一格(前进一天)
3. 调整后，把柄头按回正常位置。

上述数值如有变更恕不另行通知
CITIZEN WATCH CO., LTD.