



Cal.82S5 GILT Parts List

Balance bridge	350-021
Balance bridge (Semi finished)	710-202
Balance with hairspring regulated	039-102
Barrel and train wheel bridge	701-G60
Barrel complete	001-101
Brake lever for second hand	269-408
Casing clamp (x2)(Option)	082-060
Casing holder(Plastic)	500-710
Center wheel and pinion	012-A11
Center wheel cock	711-108
Click	060-390
Click spring	903-700
Clutch wheel	064-450
Crown wheel	058-360
Dial support ring (Option)	502-0085
Dial washer	078-140
Escape wheel and pinion	032-106
Fourth wheel and pinion	023-A12
Hour wheel	075-487
Hour wheel guard	176-103
Jeweled pallet fork and staff	035-560
Lower cap jewel mounted	094-040
Minute train cover	079-900
Minute wheel and pinion	072-520
Oscillating weight	119-A29
Pallet bridge	708-097
Ratchet sliding wheel	087-250
Ratchet sliding wheel spring	078-150
Ratchet wheel	059-630
Reduction wheel and pinion	088-190
Reversing wheel	141-190
Screw for balance bridge	924-460
Screw for barrel and train wheel bridge (x3)	924-460
Screw for casing clamp (x2)(Option)	924-460
Screw for center wheel cock (1)(x2)	923-600
Screw for click	924-460
Screw for click spring	923-600
Screw for dial (x2)	929-610
Screw for hour wheel guard (x2)	923-630
Screw for minute train cover (x2)	923-630
Screw for oscillating weight	925-540
Screw for pallet bridge	923-600
Screw for setting lever spring	923-640
Screw for stud	920-010
Screw for yoke	923-640
Second hand brake connection lever	273-201
Setting lever	067-860
Setting lever spring	077-102
Setting stem	065-212
Setting wheel	076-430
Spiral spring with jewel (x2)	098-090
Third wheel and pinion	017-760
Upper cap jewel mounted	094-010
Yoke	071-A05
** Longer setting stem (24.0mm) **	065-A06