



Cal.8205 Parts List

Balance cock complete	710-159
Balance with hairspring regulated	039-102
Barrel bridge	701-263
Barrel complete	001-870
Brake lever for second hand	269-408
Calendar corrector lever	116-290
Casing clamp (x2)(Option)	082-060
Center wheel and pinion	012-116
Center wheel cock	711-074
Click	060-390
Click spring	903-700
Clutch wheel	064-450
Crown wheel	058-360
Date corrector spring	903-A31
Date dial	108-9500
Date dial driving wheel	103-650
Date dial guard	176-140
Date jumper	109-350
Day dial	308-32XX
Day dial driving wheel	203-120
Day dial gib	178-030
Dial support ring (Option)	502-0085
Escape wheel and pinion	032-106
Fourth wheel and pinion	023-940
Friction spring for sweep sec pinion	903-690
Hour wheel	075-124
Intermediate date wheel	100-170
Intermediate wheel	087-250
Intermediate wheel washer	078-150
Jeweled pallet fork and staff	035-560
Lower cap jewel mounted	094-040
Minute wheel and pinion	072-520
Minute wheel guard	079-600
Movement holder (Plastic)	500-710
Oscillating weight	119-A76
Pallet cock	708-095
Pawl winding wheel	141-190
Ratchet wheel	059-560
Reduction wheel	088-120
Screw for barrel and train wheel bridge (x3)	924-460
Screw for casing clamp (x2)(Option)	924-460
Screw for center wheel cock (x2)	923-600
Screw for click	924-460
Screw for click spring	923-600
Screw for date dial driving wheel	923-600
Screw for date dial guard (x4)	930-060
Screw for day dial driving wheel	923-640
Screw for dial (x2)	929-610
Screw for minute train cover (x2)	923-630
Screw for oscillating weight	925-490
Screw for pallet bridge	923-600
Screw for setting lever spring	923-640
Screw for stud	920-010
Screw for yoke	923-640
Screw for balance bridge	924-460
Second hand brake connection lever	273-201
Setting lever	067-860
Setting lever spring	077-680
Setting wheel	076-430
Spiral spring with jewel (x2)	098-090
Sweep second pinion	025-670
Third wheel and pinion	017-760
Upper cap jewel mounted	094-010
Winding stem	065-212
Yoke	071-A04
** Longer setting stem (24.0mm) **	065-A06