



Cal. 9015 Instruction manual


1) DISPLAYS AND BUTTONS

2) WINDING THE MAINSPRING

3) ADJUSTING TIME

4) ADJUSTING DATE

1) DISPLAYS AND BUTTONS

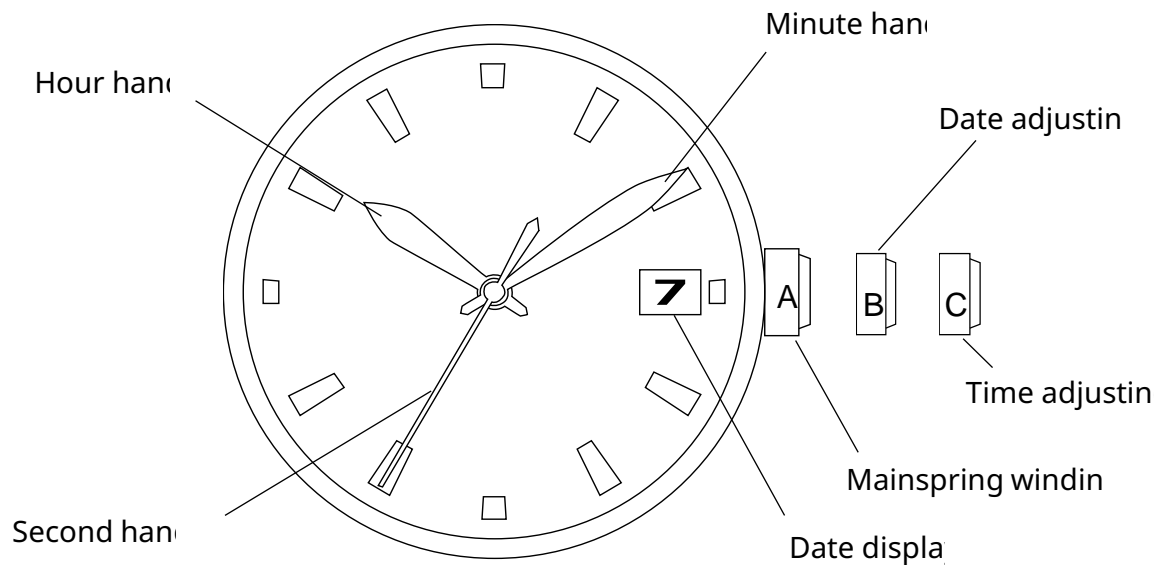

2) WINDING THE MAINSPRING

Automatic winding watch can be also manual-winded by turning the crown in "A" position.

Wind 15 ~ 20 times clockwise until second hand starts to move naturally.

3) ADJUSTING TIME

Rotate the crown in "C" position and adjust the standard time.

Then check if it is morning or afternoon and adjust correctly.

4) ADJUSTING DATE

Adjust the date by rotating the crown in "B" position.

* If the date is adjusted between the hours of around 8:30 PM and 2:00 AM the date may not change on the following day.

These specifications might be changed without prior notice.