



Reset the chronograph

Push A to reset the hands position to the ZERO position, And continue to push A to put them forward

SR621SW

24

24 Hour