



Cal.5Y20 Parts List

Battery connector spring	231-174
Cannon pinion with driving wheel	028-144
Center wheel cock	711-182
Clutch wheel	064-790
Coil unit	246-164
Dial washer	078-440
Electronic circuit unit	279-H41
Fifth wheel and pinion	084-690
Fourth wheel and pinion	023-294
Hour wheel	075-A34
Minute wheel and pinion	072-116
Rotor	285-162
Screw for train wheel bridge (x3)	923-810
Setting lever	067-176
Setting lever spring	077-115
Setting stem	065-403
Setting wheel	076-640
Spacer for setting stem	212-165
Spacer for train wheel bridge (1)	027-990
Spacer for train wheel bridge (2)	027-103
Stator	190-145
Third wheel and pinion	017-148
Yoke	071-116
** Longer setting stem (24.0mm) **	065-498