



Cal.1L60 Parts List

Battery	280-209
Battery clamp	234-A68
Battery connector spring	231-382
Battery connector spring insulator	230-220
Battery insulator	233-521
Calendar correct intermediate wheel	087-184
Calendar corrector lever	116-112
Cannon pinion with driving wheel	028-288
Circuit spacer (Spacer for setting stem)	212-322
Clutch wheel	064-790
Coil unit	246-181
Date dial	108-E5XX
Date dial driving wheel	103-111
Date dial guard	293-103
Date jumper	109-500
Dial guard	713-112
Dial guard ring	110-430
Electronic circuit unit	279-C00
Fifth wheel and pinion	084-700
Fourth wheel and pinion	023-327
Hour wheel	075-455
Minute wheel and pinion	072-121
Rotor	285-175
Screw for battery strap	923-125
Screw for coil unit	930-640
Screw for date dial guard (x3)	929-510
Screw for train wheel bridge (1)	923-112
Screw for train wheel bridge (2)	923-114
Setting lever	067-173
Setting lever spring	077-136
Setting stem	065-505
Setting wheel	076-640
Stator	190-152
Third wheel and pinion	017-149
Train wheel bridge	701-F78
Yoke	071-136
** Longer setting stem (24.0mm) **	065-508