



## Cal.8217 GILT Parts List

Balance bridge	710-202
Balance with hairspring regulated	039-102
Barrel and train wheel bridge	701-G60
Barrel complete	001-101
Brake lever for second hand	269-408
Calendar corrector lever	116-300
Calendar corrector lever spring	903-A31
Casing clamp (x2)(Option)	082-060
Center seconds pinion	025-106
Center wheel and pinion	012-232
Center wheel cock	711-108
Click	060-390
Click spring	903-700
Clutch wheel	064-450
Crown wheel	058-360
Date dial	108-9500
Date dial guard	176-A06
Dial support ring (Option)	502-0085
Dial washer	078-140
Escape wheel and pinion	032-106
Fourth wheel and pinion	023-940
Hour wheel	075-487
Intermediate date wheel	100-170
Jeweled pallet fork and staff	035-560
Jumper	109-350
Lower cap jewel mounted	094-040
Minute train cover	079-600
Minute wheel and pinion	072-520
Movement holder (Plastic)	500-710
Oscillating weight	119-A29
Pallet bridge	708-097
Pinion for 24 hour wheel	252-A29
Pinion for 24 hour wheel spring	293-A16
Ratchet sliding wheel	087-250
Ratchet sliding wheel spring	078-150
Ratchet wheel	059-630
Reduction wheel and pinion	088-190
Reversing wheel	141-190
Screw for barrel and train wheel bridge (x3)	924-460
Screw for casing clamp (x2)(Option)	924-460
Screw for center wheel cock (1)(x2)	923-600
Screw for click	924-460
Screw for click spring	923-600
Screw for date dial guard (x2)	923-630
Screw for dial (x2)	929-610
Screw for minute train cover (x2)	923-630
Screw for oscillating weight	925-540
Screw for pallet bridge	923-600
Screw for pinion for 24 hour wheel spring	930-060
Screw for setting lever spring	923-640
Screw for stud	920-010
Screw for yoke	923-640
Screw for balance bridge	924-460
Second hand brake connection lever	273-201
Seconds pinion friction spring	903-690
Setting lever	067-860
Setting lever spring	077-680
Setting stem	065-212
Setting wheel	076-430
Spiral spring with jewel (x2)	098-090
Third wheel and pinion	017-760
Upper cap jewel mounted	094-010
Yoke	071-A04
24hour wheel	103-A01
** Longer setting stem (24.0mm) **	065-A06