


6S10 6S20 6S30 6S11 6S21

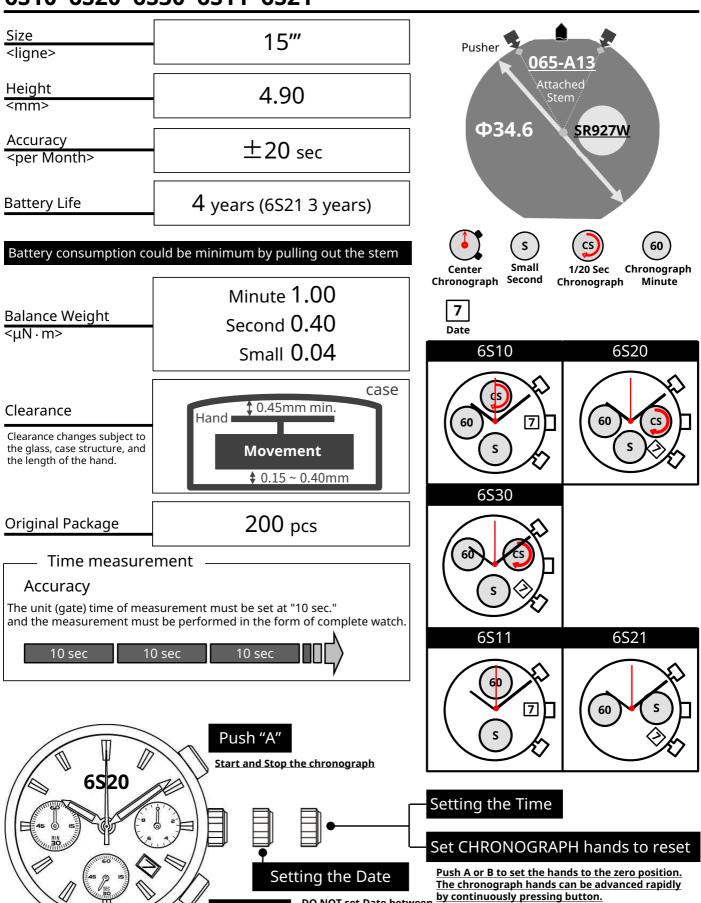

DO NOT set Date between

9:00pm - 1:00am

A for the Center Chronograph Second hand, B for

1/20 hands

Reset the chronograph

Push "B"