




Cal. 90S5 Instruction manual

1) DISPLAYS AND BUTTONS

2) WINDING THE MAINSPRING

3) ADJUSTING TIME

1) DISPLAYS AND BUTTONS

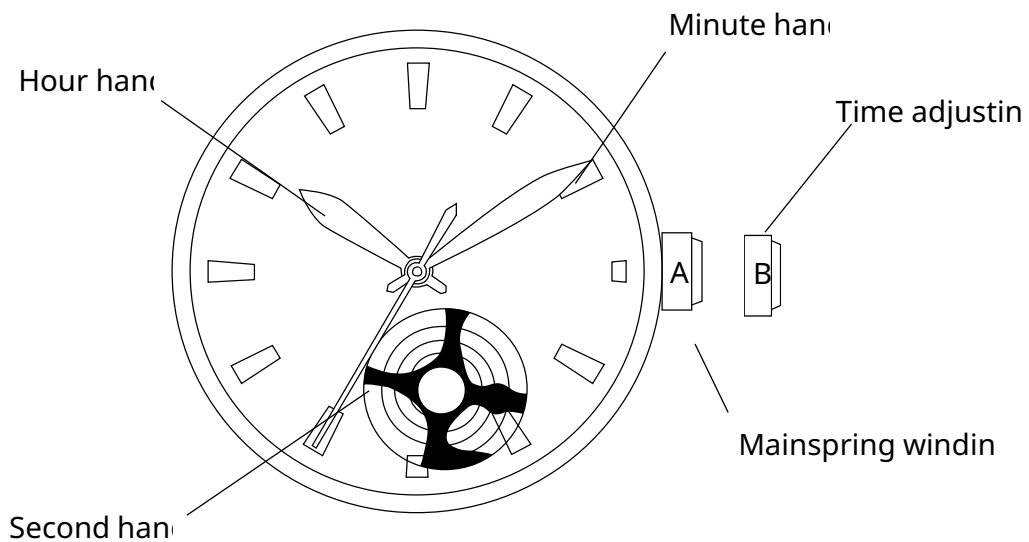

2) WINDING THE MAINSPRING

Automatic winding watch can be also manual-winded by turning the crown in "A" position. Wind 15 ~ 20 times clockwise until second hand starts to move naturally.

3) ADJUSTING TIME

Rotate the crown in "B" position and adjust the standard time.

These specifications might be changed without prior notice.