



Cal.8N40 GILT Parts List

Balance cock complete	350-045
Balance cock complete (Semi finished)	710-210
Balance with hairspring regulated	039-102
Barrel bridge	701-763
Barrel complete	001-101
Brake lever for second hand	269-408
Casing clamp (x2)(Option)	082-060
Center wheel and pinion	012-A11
Center wheel cock	711-108
Click	060-390
Click spring	903-A04
Clutch wheel	064-450
Crown wheel	058-360
Dial washer	078-140
Escape wheel and pinion	032-106
Fourth wheel and pinion	023-A12
Hour wheel	075-487
Hour wheel guard	176-890
Intermediate wheel	087-250
Jeweled pallet fork and staff	035-560
Lower cap jewel mounted	094-040
Minute wheel and pinion	072-520
Minute wheel guard	079-900
Oscillating weight	119-A29
Pallet cock	708-102
Pawl winding wheel	141-190
Ratchet	078-150
Ratchet wheel	059-630
Reduction wheel	088-190
Screw for balance bridge	924-460
Screw for barrel and train wheel bridge (x3)	924-460
Screw for casing clamp (x2)(Option)	924-460
Screw for center wheel cock (1)(x2)	923-600
Screw for click	924-460
Screw for click spring	923-600
Screw for dial (x2)	929-610
Screw for hour wheel guard (x3)	923-630
Screw for minute train cover (x2)	923-630
Screw for oscillating weight	925-540
Screw for pallet bridge	923-600
Screw for setting lever spring	923-640
Screw for stud	920-010
Screw for yoke	923-640
Second hand brake connection lever	273-201
Setting lever spring	077-102
Setting wheel	076-430
Spiral spring with jewel (x2)	098-090
Third wheel and pinion	017-760
Upper cap jewel mounted	094-010
Winding stem	065-212
Yoke	071-A05
** Longer setting stem (24.0mm) **	065-A06