



Cal.9075 Parts List

Balance bridge	710-204
Balance with hairspring regulated	039-993
Barrel and train wheel bridge	701-J09
Barrel complete	001-992
Brake lever for second hand	269-402
Calendar platform	713-167
Cannon pinion with driving wheel	028-A57
Cap jewel mounted (1)	094-040
Cap jewel mounted (2)	094-010
Casing clamp (x2)(Option)	082-060
Center wheel and pinion	012-A43
Center wheel bridge	702-201
Click	060-551
Click spring	903-A15
Clutch wheel	064-991
Crown wheel	058-502
Date dial	108-P7XX
Date dial guard	293-A53
Date jumper	109-893
Dial spacer	212-B12
Dial washer	078-140
Escape wheel and pinion	032-991
Fourth wheel and pinion	023-A65
Hour wheel (Second)	075-B43
Hour wheel unit (Double toothing)	350-055
Intermediate hour wheel (Second)	087-C22
Intermediate reduction wheel and pinion (1)	088-254
Intermediate reduction wheel and pinion (2)	088-252
Intermediate reduction wheel and pinion (3)	088-253
Intermediate reduction wheel and pinion (4)	138-252
Intermediate time corrector wheel (1)	087-C23
Intermediate time corrector wheel (2)	087-A72
Jeweled pallet fork and staff	035-702
Lower plate for calender	719-068
Minute wheel and pinion	072-A07
Minute wheel guard	079-A00
Movement holder (Plastic)	500-0000M
Operating lever	257-152
Oscillating weight	119-B38
Pallet bridge	708-091
Ratchet sliding wheel (1)	087-B08
Ratchet sliding wheel (2)	087-C03
Ratchet wheel	059-805
Reduction wheel and pinion (1) spring clip	115-101
Reversing wheel	141-251
Screw for balance bridge	923-998
Screw for barrel and train wheel bridge (x5)	923-998
Screw for calendar guard (x3)	923-A10
Screw for casing clamp (x2)(Option)	924-752
Screw for center wheel bridge	923-998
Screw for click	922-820
Screw for click spring	922-820
Screw for date dial guard (1)(x2)	930-706
Screw for date dial guard (2)(x2)	930-702
Screw for dial (x2)	929-808
Screw for minute train cover (x2)	923-630
Screw for oscillating weight (x3)	923-999
Screw for pallet bridge (x2)	922-820
Screw for stud	927-020
Screw for train wheel guard (Automatic)(x2)	930-701
Screw for train wheel guard (Manual winding)(x3)	930-701
Setting lever	067-995
Setting lever pin (1)	906-A12
Setting lever spring	077-996
Setting stem	065-A05
Setting wheel	076-751
Spiral spring with jewel (1)	098-090
Spiral spring with jewel (2)	098-090
Third wheel and pinion	017-A11
Time corrector wheel	087-A72
Train wheel guard (Automatic)	117-354
Train wheel guard (Manual winding)	117-361
Winding pinion	063-351
Yoke	071-995
24hour wheel	103-A28
** Longer setting stem (24.0mm) **	065-A25