



Cal.9T22 Parts List

Battery	280-730
Battery connector	231-368
Battery insulator	230-220
Cannon pinion with driving wheel	028-287
Clutch wheel	064-790
Coil unit	246-182
Dial washer	078-040
Electric circuit unit	279-L60
Fifth wheel and pinion	084-700
Fourth wheel and pinion	023-318
Hour wheel	075-446
Minute wheel and pinion	072-121
Rotor	285-175
Screw for coil unit	930-640
Screw for train wheel bridge (x2)	923-112
Setting lever	067-194
Setting lever spring	077-136
Setting stem	065-495
Setting wheel	076-640
Spacer for setting stem	212-246
Stator	190-A09
Third wheel and pinion	017-151
Train wheel bridge	701-J74
Yoke	071-137
** Longer setting stem (21.0mm) **	065-551