



Cal.6P20 Parts List

Battery	280-340
Battery connector spring	231-163
Calendar correcting pillar wheel	255-340
Cannon pinion with driving wheel	028-196
Center wheel cock	711-183
Clutch wheel	064-790
Coil unit	246-121
Date corrector wheel	213-330
Date dial driving wheel	103-970
Date finger	106-740
Date jumper	109-520
Date wheel	187-080
Day wheel	200-030
Dial guard	293-870
Dial guard gib	027-102
Electronic circuit unit	279-L30
Fifth wheel and pinion	084-460
Fourth wheel and pinion	023-205
Hour wheel	075-328
Intermediate date correcting wheel	087-620
Intermediate date wheel (1)	100-330
Intermediate date wheel (2)	100-340
Intermediate moon age corrector wheel	087-790
Minute wheel and pinion	072-890
Month corrector lever guard	117-260
Moon phase jumper	109-540
Moon phase stud pin	107-302
Rotor	285-800
Screw for calendar guard (x3)	929-520
Screw for train for bridge (x4)	923-810
Setting lever	307-75XX
Setting lever	067-173
Setting lever spring	077-109
Setting stem	065-379
Setting wheel	076-640
Spacer for setting stem	212-146
Spacer for train wheel bridge (1)	027-990
Spacer for train wheel bridge (2)	027-101
Stator	190-790
Third wheel and pinion	017-119
Train wheel bridge	701-B79
Yoke	071-970
** Longer setting stem (21.0mm) **	065-407
** Longer setting stem (24.0mm) **	065-426