



Cal. 6P09 Instruction manual

FEATURES : ANALOG MULTI-HAND QUARTZ WATCH WITH DAY, DATE, MONTH AND 24 HOU

A) DISPLAY AND BUTTON


B) OPERATION PROCEDURE

C) SETTING THE DAY AND TIME (HOUR, 24 HOUR, MINUTE, SECOND)

D) SETTING THE MONTH (BY QUICK OPERATION)

E) SETTING THE DATE (BY QUICK OPERATION)

A) DISPLAY AND BUTTON

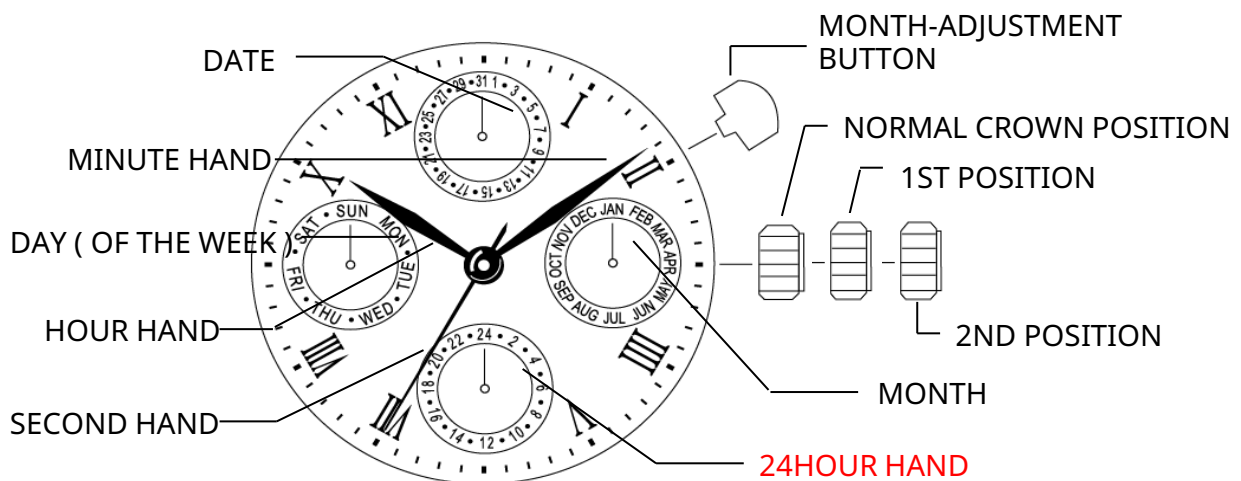

NORMAL CROWN POSITION

1ST POSITION

2ND POSITION

**QUICK OPERATION - DATE (COUNTERCLOCKWISE)
TIME/DAY SETTING (CLOCKWISE)**

B) OPERATION PROCEDURE

1 SETTING THE DAY

SETTING THE TIME (HOUR, 24HOUR, MINUTE and SECOND)


2 SETTING THE MONTH

3 SETTING THE DATE

C) SETTING THE DAY AND TIME (HOUR, 24 HOUR, MINUTE AND SECOND)

The hour, 24 hour, minute, second and day are set by the same operation.

SETTING PROCEDURE

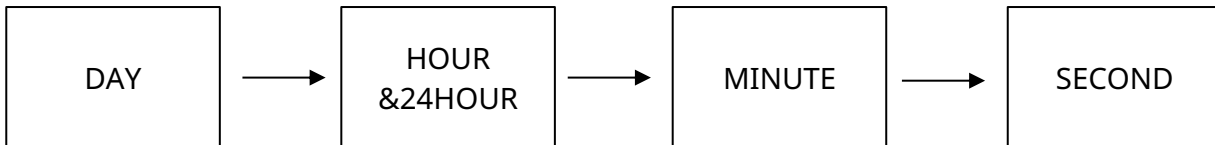

C-1) SETTING THE DAY

Pull the crown out to the 2nd position to stop the second hand at 0 (12 o'clock).

Turn the hour/minute hands in a **clockwise** direction to set a day

In order to set the day, you must advance the hour hand by 24 hours per day.

NOTE:

* If the day is set by turning the crown counterclockwise, there is the possibility the date will not change over.

Do not set the day by turning the crown in counterclockwise direction.

* The day changes somewhere between 0:00a.m. and 5:30a.m. or a little later.

C-2) SETTING THE TIME

After setting the day, set the hour (and 24hour) and minute hands.

Turn the hour/minute hands in a **clockwise** direction to set the time.

To ensure time is set accurately, first turn the minute hand 5 minutes ahead of desired time and then turn back (in a counterclockwise) to the desired time.

After setting the time, use a time signal to synchronize the watch by pushing crown to the normal position to start the second hand going.

NOTE: Make sure you have correctly set AM/PM before setting the time.

When the day changes over, it is a.m..

(Day changes over between 0:00a.m. and 5:30a.m. or little later)

Check am./p.m. by the 24hour hand.

D) SETTING THE MONTH (BY QUICK OPERATION)

Each time the month-adjustment button is pushed, the month advances one month at a time. Be sure to press firmly on the button when making month changes.

NOTE:

* Do not set the month when the date hand is between the 26th and 31st. Move the date hand out of this period. After this operation, return the date hand to the proper setting. (When the date hand is between the 26th and 31st, month quick setting can not be made or if a quick setting is attempted, the month may not advance to the next month as normal.)

* The month and date are synchronized such that when adjusting the date at the end of short months (less than 31 days), the month automatically adjusts to the correct month. The month hand begins changing to the next month around midnight of the 30th day. It completes the change around midnight of the 31st. (On the 31st, the position of the month between the current and next month.)

E) SETTING THE DATE (BY QUICK OPERATION)

Pull the crown out to the 1st position. Turn the crown **counterclockwise** to set the date quick

NOTE: * Do not set the date between the hours 9:00p.m. and 0:30a.m..

The date may not change correctly the next day.

These specifications might be changed without prior notice.