



## Cal.9015 Gilt Parts List

Balance bridge	350-046
Balance bridge (Semi finished)	710-211
Balance with hairspring regulated	039-993
Barrel and train wheel bridge	701-K02
Barrel complete	001-998
Brake lever for second hand	269-402
Calendar corrector lever spring	903-A17
Calendar corrector wheel	213-614
Cannon pinion with driving wheel	028-A16
Cap jewel mounted (1)	094-040
Cap jewel mounted (2)	094-010
Casing clamp (x2)(Option)	082-060
Center wheel and pinion	012-A43
Center wheel bridge	702-201
Click	060-551
Click spring	903-A15
Clutch wheel	064-991
Crown wheel	058-502
Date dial	108-L3XX
Date indicator maintaining plate / Hour wheel spring	176-A04
Date jumper	109-875
Dial spacer	212-A47
Dial washer	078-400
Escape wheel and pinion	032-991
Fourth wheel and pinion	023-A21
Hour wheel	075-A51
Intermediate date correcting wheel	087-A72
Intermediate date correcting wheel (1)	087-A71
Intermediate date correcting wheel (2)	087-A75
Intermediate reduction wheel and pinion (1)	088-254
Intermediate reduction wheel and pinion (2)	088-252
Intermediate reduction wheel and pinion (3)	088-253
Intermediate reduction wheel and pinion (4)	138-252
Jeweled pallet fork and staff	035-702
Minute wheel and pinion	072-998
Movement holder (Plastic)	500-00228
Operating lever	257-152
Oscillating weight	119-B20
Pallet bridge	708-104
Ratchet sliding wheel (1)	087-B08
Ratchet sliding wheel (2)	087-C03
Ratchet wheel	059-805
Reduction wheel and pinion (1) spring clip	115-101
Reversing wheel	141-251
Screw for balance bridge	923-998
Screw for barrel and train wheel bridge (x5)	923-998
Screw for casing clamp (x2)(Option)	924-752
Screw for center wheel bridge	923-998
Screw for click	922-820
Screw for click spring	922-820
Screw for dial (x2)	929-808
Screw for hour wheel spring (x5)	930-701
Screw for minute train cover (x2)	923-630
Screw for oscillating weight (x3)	923-999
Screw for pallet bridge (x2)	922-820
Screw for stud	927-020
Screw for train wheel guard (Automatic)(x2)	930-701
Screw for train wheel guard (Manual winding)(x3)	930-701
Setting lever	067-995
Setting lever pin	906-A12
Setting lever spring	077-996
Setting stem	065-A05
Setting wheel	076-751
Spiral spring with jewel (1)	098-090
Spiral spring with jewel (2)	098-090
Third wheel and pinion	017-A11
Train wheel guard (Automatic)	117-354
Train wheel guard (Manual winding)	117-361
Winding pinion	063-351
Yoke	071-995
24hour wheel	103-A16
** Longer setting stem (24.0mm) **	065-A25