



## Cal. 8218/8219 Instruction manual

---


### A) DISPLAYS AND BUTTONS

### B) WINDING THE MAINSPRING

### C) SETTING THE TIME

### D) SETTING THE DATE

### A) DISPLAYS AND BUTTONS

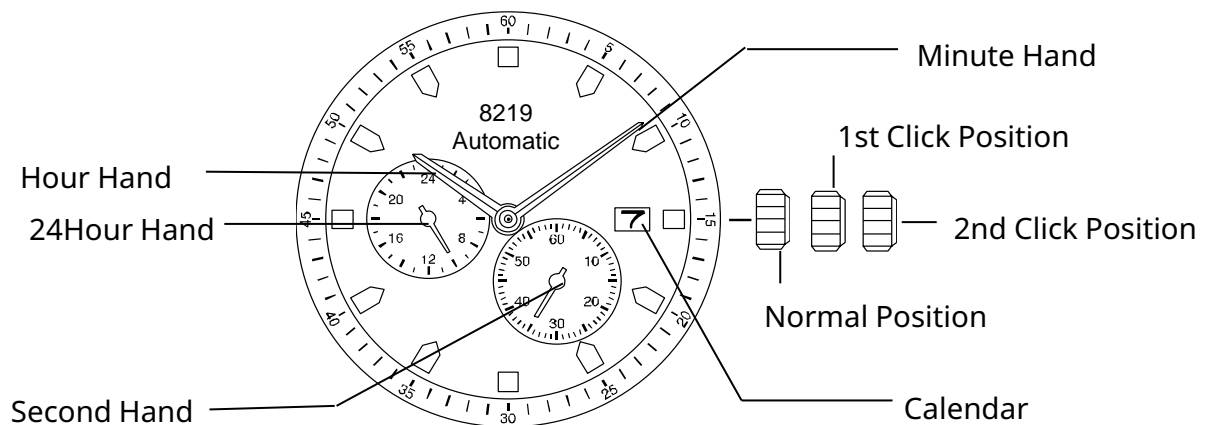

### B) WINDING THE MAINSPRING

Automatic winding watch can also be hand winded by turning the crown clockwise in Normal position. Wind several times clockwise. It will start to move naturally.

### C) SETTING THE TIME

1. Pull the crown out to the 2nd Click Position.
2. Turn the crown to set hour and minute hands.
3. After the time has been set, push the crown back to the Normal position.

\*8219: 24Hour hand moves linked with the center Hour and Minute hand.

#### **D) SETTING THE DATE**

1. Pull the crown out to the 1st Click Position.
2. Turn the crown clockwise to set the date.
  - \* If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change on the following day.
3. After the date has been set, push the crown back to the normal position.

***These specifications might be changed without prior notice.***