



## Cal.9100 Parts List

Balance bridge	350-013
Balance bridge (Semi finished)	710-204
Balance with hairspring regulated	039-993
Barrel and train wheel bridge	701-H01
Barrel complete	001-995
Barrel lower wheel	901-A56
Brake lever for second hand	269-402
Calendar corrector finger	106-860
Calendar corrector wheel	213-616
Calendar corrector wheel spring	903-A18
Calendar platform	713-160
Cannon pinion with driving wheel	028-A22
Cap jewel mounted (1)	094-040
Cap jewel mounted (2)	094-010
Casing clamp (x2)(Option)	082-060
Center wheel and pinion	012-A43
Center wheel bridge	702-201
Click	060-551
Click spring	903-A15
Clutch wheel	064-991
Crown wheel	058-502
Date dial	108-K9XX
Date dial guard	293-A18
Date jumper	109-875
Day corrector lever	116-993
Day jumper	209-251
Day wheel	200-156
Dial washer (1)	078-400
Dial washer (2)	078-660
Escape wheel and pinion	032-991
Fourth wheel and pinion	023-A27
Hour wheel	075-A63
Intermediate date correcting wheel	087-A72
Intermediate date wheel (1)	087-A93
Intermediate date wheel (2)	087-A94
Intermediate power reserve wheel (1)	087-A95
Intermediate power reserve wheel (2)	087-A96
Intermediate power reserve wheel (3)	087-A97
Intermediate power reserve wheel (4)	087-B01
Intermediate reduction wheel and pinion (1)	088-254
Intermediate reduction wheel and pinion (1)spring clip	115-101
Intermediate reduction wheel and pinion (2)	088-252
Intermediate reduction wheel and pinion (3)	088-253
Intermediate reduction wheel and pinion (4)	138-252
Jeweled pallet fork and staff	035-702
Lower plate for barrel complete	719-058
Lower plate for calender	719-056
Minute wheel and pinion	072-999
Month corrector lever	265-202
Month corrector spring	903-A19
Month driving wheel	103-A12
Month jumper	109-874
Month wheel	294-807
Movement holder (Plastic)	500-00245
Operating lever	257-152
Oscillating weight	119-A30
Pallet bridge	708-091
Power reserve wheel	189-163
Ratchet sliding wheel (1)	087-B08
Ratchet sliding wheel (2)	087-C03
Ratchet wheel	059-805
Reversing wheel	141-251
Screw for balance bridge	923-998
Screw for barrel and train wheel bridge (x5)	923-998
Screw for calendar platform	929-700
Screw for casing clamp (x2)(Option)	924-752
Screw for center wheel bridge	923-998
Screw for click	922-820
Screw for click spring	922-820
Screw for date dial guard	929-700
Screw for date dial guard (x4)	930-702
Screw for lower plate for barrel complete (x2)	922-940
Screw for lower plate for calender (x2)	923-998
Screw for oscillating weight (x3)	923-999
Screw for pallet bridge (x2)	922-820
Screw for setting lever jumper (x2)	923-630
Screw for stud	927-020
Screw for train wheel guard (Automatic)(x2)	930-701
Screw for train wheel guard (Manual winding)(x3)	930-701
Screw for upper plate for calender (x4)	923-998
Setting lever	067-995
Setting lever pin	906-A12
Setting lever spring	077-996
Setting stem	065-A05
Setting wheel	076-751
Spiral spring with jewel (1)	098-090
Spiral spring with jewel (2)	098-090
Third wheel and pinion	017-A11
Train wheel guard (Automatic)	117-354
Train wheel guard (Manual winding)	117-361
Upper plate for calender	703-112
Winding pinion	063-351
Yoke	071-995
24hour driving wheel	100-818
24hour wheel	103-A13
** Longer setting stem (24.0mm) **	065-A25