



Cal.82S7 Parts List

Balance bridge	710-191
Balance with hairspring regulated	039-102
Barrel and train wheel bridge	701-F52
Barrel complete	001-870
Brake lever for second hand	269-408
Casing clamp (x2)(Option)	082-060
Center wheel and pinion	012-A11
Center wheel cock	711-074
Click	060-390
Click spring	903-700
Clutch wheel	064-450
Crown wheel	058-360
Dial support ring (Option)	502-0085
Dial washer	078-140
Escape wheel and pinion	032-106
Fourth wheel and pinion	023-A12
Hour wheel	075-487
Hour wheel guard	079-998
Intermediate date wheel	100-170
Jeweled pallet fork and staff	035-560
Lower cap jewel mounted	094-250
Minute train cover	079-890
Minute wheel and pinion	072-520
Movement holder (Plastic)	500-710
Oscillating weight	119-A17
Pallet bridge	708-095
Ratchet sliding wheel	087-250
Ratchet sliding wheel spring	078-150
Ratchet wheel	059-560
Reduction wheel and pinion	088-120
Reversing wheel	141-190
Screw for barrel and train wheel bridge (x3)	924-460
Screw for casing clamp (x2)(Option)	924-460
Screw for center wheel cock (1)(x2)	923-600
Screw for click	924-460
Screw for click spring	923-600
Screw for dial (x2)	929-610
Screw for hour wheel guard (x3)	923-630
Screw for minute train cover (x2)	923-630
Screw for oscillating weight	925-490
Screw for pallet bridge	923-600
Screw for setting lever spring	923-640
Screw for stud	920-010
Screw for yoke	923-640
Screw for balance bridge	924-460
Second hand brake connection lever	273-201
Setting lever	067-860
Setting lever spring	077-690
Setting stem	065-212
Setting wheel	076-430
Spiral spring with jewel (x2)	098-090
Third wheel and pinion	017-760
Upper cap jewel mounted	094-260
Yoke	071-A04
24hour wheel	100-808
** Longer setting stem (24.0mm) **	065-A06