




Cal. 5R32 Instruction manual

A) DISPLAY

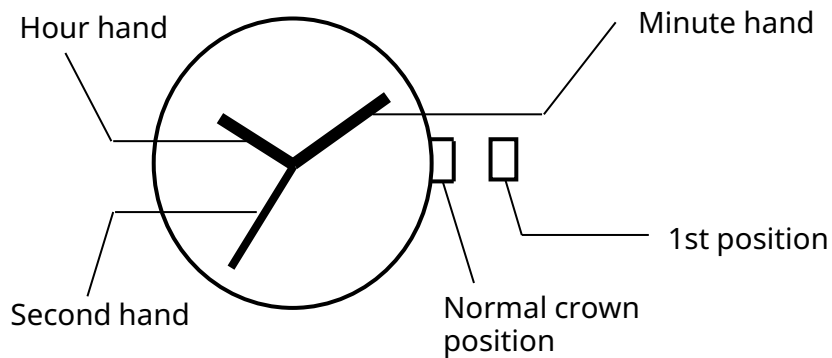

B) SETTING THE TIME

1. Pull the crown out to the 1st position.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position, second hand begins to run.

These specifications might be changed without prior notice.