



Cal.1L45 Parts List

Battery	280-340
Battery connector spring	231-368
Battery insulator	230-220
Cannon pinion with driving wheel	028-306
Clutch wheel	064-790
Coil unit	246-181
Date dial guard	713-125
Dial washer	078-040
Electronic circuit unit	279-A45
Fifth wheel and pinion	084-750
Fourth wheel and pinion	023-328
Friction spring for second wheel	903-106
Hour wheel	075-467
Intermediate seconds wheel (1)	087-195
Intermediate seconds wheel (3)	087-196
Lower fifth pinion	020-070
Minute wheel and pinion	072-126
Rotor	285-175
Screw for coil unit	923-107
Screw for dial guard (x3)	922-940
Screw for train wheel bridge (x2)	923-112
Second wheel	025-107
Setting lever	067-194
Setting lever spring	077-136
Setting stem	065-477
Setting wheel	076-640
Spacer for setting stem	212-239
Stator	190-A09
Third wheel and pinion	017-149
Train wheel bridge	701-E80
Yoke	071-136