



Cal.6T28 GILT Parts List

Automatic train bridge	706-068
Balance cock complete	350-035
Balance cock complete (Semi finished)	710-215
Balance with hairspring regulated	039-A03
Barrel bridge	701-828
Barrel complete	001-590
Cap jewel mounted (x2)	094-240
Casing clamp (x2)(Option)	082-070
Casing holder(Plastic)	500-6621
Center second pinion	025-410
Center wheel	012-207
Center wheel cock	711-052
Click spring	903-950
Clutch wheel	064-210
Dial support ring (Option)	032-840
Driving gear for ratchet wheel	138-120
Escape wheel and pinion	032-840
Fourth wheel and pinion	023-700
Friction spring for center second pinion	903-360
Hour wheel	075-378
Intermediate wheel washer	078-040
Jeweled pallet fork and staff	035-420
Minute wheel and pinion	072-340
Oscillating weight	119-222
Pallet cock	708-078
Pawl winding wheel	141-210
Ratchet wheel	059-440
Reduction wheel	088-150
Screw for automatic train bridge (x2)	921-250
Screw for balance bridge	067-A05
Screw for barrel and train wheel bridge (x3)	922-600
Screw for casing clamp (x2)(Option)	923-140
Screw for center wheel cock (x2)	922-600
Screw for dial (x2)	928-150
Screw for friction spring	933-050
Screw for minute wheel guard	929-080
Screw for pallet bridge	922-180
Screw for setting lever spring (x2)	929-080
Screw for stud	927-020
Setting lever	077-118
Setting lever spring	065-117
Setting stem	076-270
Setting wheel	098-040
Spiral spring with jewel (x2)	025-920
Third wheel and pinion	017-520
Winding pinion	063-200
Yoke	071-994
Yoke spring	902-260
 ** Longer stting stem (22.6mm) **	 065-489