



Cal.6P28 Parts List

Battery	280-340
Battery connector spring	231-163
Cannon pinion with driving wheel	028-196
Center wheel cock	711-183
Clutch wheel	064-790
Coil unit	246-121
Date dial driving wheel	103-970
Date finger	106-740
Date jumper	109-520
Dial guard	293-870
Dial guard gib	027-102
Electronic circuit unit	279-L30
Fifth wheel and pinion	084-460
Fourth wheel and pinion	023-205
Hour wheel	075-328
Intermediate 24 hour driving wheel (1)	087-990
Intermediate 24 hour driving wheel (2)	087-B41
Intermediate date wheel	100-330
Minute wheel and pinion	072-890
Month corrector lever guard	117-260
Rotor	285-800
Screw for calendar guard (x3)	929-520
Screw for train for bridge (x3)	923-810
Setting lever	067-168
Setting lever spring	077-109
Setting stem	065-379
Setting lever	076-640
Spacer for setting stem	212-138
Spacer for train wheel bridge	027-101
Stator	190-790
Third wheel and pinion	017-119
Train wheel bridge	701-H75
Yoke	071-970
24 hour wheel	100-350
24 hour wheel guard	117-270
** Longer setting stem (21.0mm) **	065-407
** Longer setting stem (24.0mm) **	065-426