



## Cal. 9039 Instruction manual


---

### 1) DISPLAYS AND BUTTONS

### 2) WINDING THE MAINSPRING

### 3) ADJUSTING TIME

#### 1) DISPLAYS AND BUTTONS

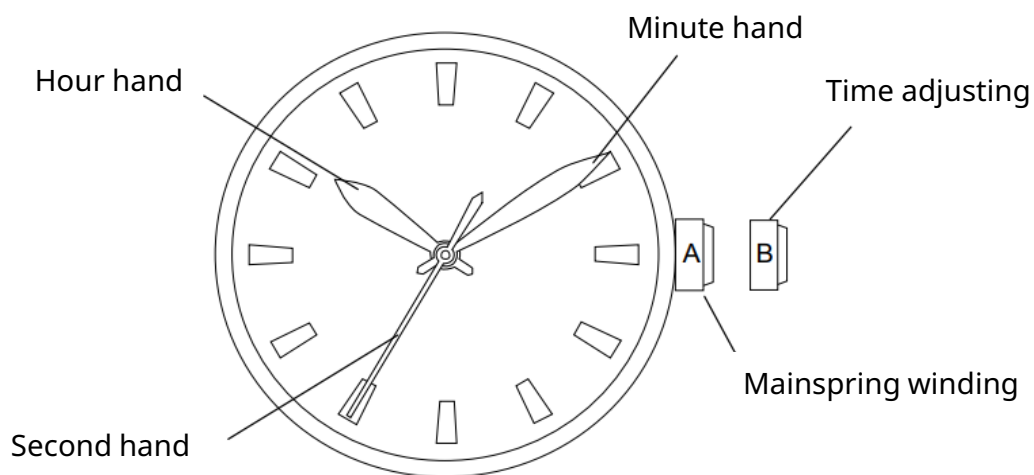

#### 2) WINDING THE MAINSPRING

Automatic winding watch can be also manual-winded by turning the crown in "A" position.

Wind 15~20 times clockwise until second hand starts to move naturally.

#### 3) ADJUSTING TIME

Rotate the crown in "B" position and adjust the standard time.

***These specifications might be changed without prior notice.***