



Cal.GL14 Parts List

Battery	280-340
Battery clamp	234-C64
Calendar corrector intermediate wheel (1)	087-113
Calendar corrector intermediate wheel (2)	087-114
Calendar corrector operating wheel	255-430
Calendar plate	714-094
Cannon pinion with driving wheel	028-A52
Center wheel cock	711-256
Clutch wheel	064-101
Coil unit	246-A24
Date dial (Date disk)	108-G2X
Date dial driving wheel	103-123
Date dial guard	293-123
Date jumper	109-430
Electric circuit unit	279-M07
Fifth wheel and pinion	084-860
Fourth wheel and pinion	023-A61
Hour wheel	075-B29
Minute wheel and pinion	072-131
Rotor	285-226
Screw for battery clamp	922-204
Screw for coil unit	922-204
Screw for date dial guard (x2)	929-680
Screw for electric circuit unit	922-204
Setting lever spring	019-260
Setting stem	065-547
Setting wheel	076-700
Stator	190-A31
Third wheel and pinion	017-167
Train wheel bridge	701-K01
Yoke (Train wheel setting lever)	292-360
** Longer setting stem (24.0mm) **	065-995