



Cal.2350 Parts List

Battery	280-390
Battery clamp	234-A82
Battery connector spring	231-105
Calendar plate	714-063
Center wheel	028-600
Center wheel cock	711-100
Clutch wheel	064-660
Clutch wheel guard	212-200
Coil unit	246-144
Corrector intermediate wheel	087-420
Corrector lever	116-360
Corrector wheel	213-200
Date dial	108-H7XX
Date dial driving wheel	103-760
Date dial guard	293-340
Day dial	308-A8XX
Day dial gib	178-140
Electronic circuit unit	279-H89
Fifth wheel and pinion	084-190
Fourth wheel and pinion	023-154
Hour wheel	075-192
Jumper	109-430
Minute wheel and pinion	072-760
Rotor	285-202
Screw for coil unit	922-183
Screw for date dial guard	929-390
Screw for electronic circuit unit (1)	922-183
Screw for electronic circuit unit (2)	922-154
Screw for train wheel bridge (1)	922-154
Screw for train wheel bridge (2)	934-440
Setting lever	067-145
Setting stem	065-299
Spacer	212-319
Stator	190-420
Third wheel and pinion	017-103
Train wheel bridge	701-933
Yoke	071-998
** Longer setting stem (21.0mm) **	065-371
** Longer setting stem (24.0mm) **	065-511
** Longer setting stem (33.7mm) **	065-994