



## Cal.6T28 Parts List

Automatic train bridge	706-065
Balance cock complete	350-036
Balance cock complete (Semi finished)	710-174
Balance with hairspring regulated	039-690
Barrel bridge	701-486
Barrel complete	001-590
Cap jewel mounted (x2)	094-270
Casing clamp (x2)(Option)	082-070
Center wheel	012-207
Center wheel cock	711-052
Click spring	903-950
Clutch wheel	064-210
Driving gear for ratchet wheel	138-120
Escape wheel and pinion	032-840
Fourth wheel and pinion	023-700
Friction spring for sweep second pinion	903-360
Hour wheel	075-378
Intermediate wheel washer	078-040
Jeweled pallet fork and staff	035-420
Minute wheel and pinion	072-340
Minute wheel guard	079-250
Oscillating weight	119-206
Pallet cock	708-054
Pawl winding wheel	141-210
Ratchet wheel	059-440
Reduction wheel	088-150
Screw for automatic train bridge (x2)	921-250
Screw for barrel and train wheel bridge (x3)	922-600
Screw for casing clamp (x2)(Option)	923-140
Screw for center wheel cock (x2)	922-600
Screw for dial (x2)	928-150
Screw for friction spring	933-050
Screw for minute wheel guard	929-080
Screw for pallet bridge	922-180
Screw for setting lever spring (x2)	929-080
Screw for stud	927-020
Screw for balance bridge	922-600
Setting lever	067-142
Setting lever spring	077-390
Setting stem	065-117
Setting wheel	076-270
Spiral spring with jewel (x2)	098-040
Sweep second pinion	025-920
Third wheel and pinion	017-520
Winding pinion	063-200
Yoke	071-122
Yoke spring	902-260
** Longer stting stem (22.6mm) **	065-489