



Cal.8N24 GILT Parts List

Balance cock complete	350-045
Balance cock complete (Semi finished)	710-210
Balance with hairspring regulated	039-102
Barrel bridge	701-763
Barrel complete	001-101
Brake lever for second hand	269-408
Casing clamp (x2)(Option)	082-060
Center wheel and pinion	012-168
Center wheel cock	711-127
Click	060-390
Click spring	903-A04
Clutch wheel	064-450
Crown wheel	058-360
Dial washer	078-140
Escape wheel and pinion	032-106
Fourth wheel and pinion	023-940
Friction spring for sweep sec pinion	903-690
Hour wheel	075-213
Hour wheel guard	176-890
Intermediate wheel	087-250
Jeweled pallet fork and staff	035-560
Lower cap jewel mounted	094-040
Minute wheel and pinion	072-520
Minute wheel guard	079-900
Oscillating weight	119-A29
Pallet cock	708-102
Pawl winding wheel	141-190
Ratchet sliding wheel spring	078-150
Ratchet wheel	059-630
Reduction wheel	088-190
Screw for barrel and train wheel bridge (x3)	924-460
Screw for casing clamp (x2)(Option)	924-460
Screw for center wheel cock (1)(x2)	923-600
Screw for click	924-460
Screw for click spring	923-600
Screw for dial (x2)	929-610
Screw for hour wheel guard (x3)	923-630
Screw for minute train cover (x2)	923-630
Screw for oscillating weight	925-540
Screw for pallet bridge	923-600
Screw for setting lever spring	923-640
Screw for stud	920-010
Screw for yoke	923-640
Screw for balance bridge	924-460
Second hand brake connection lever	273-201
Setting lever	067-158
Setting lever spring	077-102
Setting stem	065-212
Setting wheel	076-430
Spiral spring with jewel (x2)	098-090
Sweep second pinion	025-790
Third wheel and pinion	017-760
Upper cap jewel mounted	094-010
Yoke	071-A05
** Longer setting stem (24.0mm) **	065-A06